
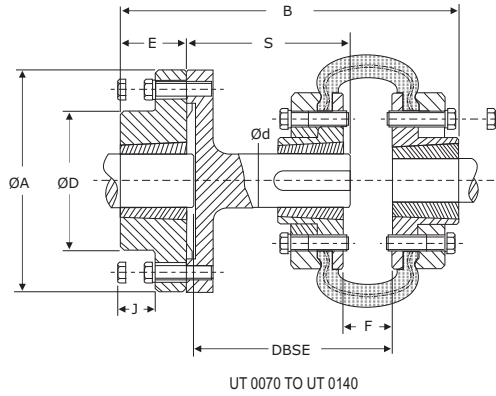


TYPE : UST COUPLINGS

(Tyre Spacer Coupling)

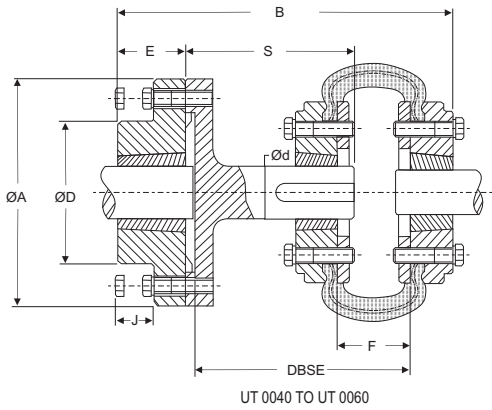

FEATURES

- Spacer makes maintenance more efficient and easy as a space between two shafts up to DBSE is available
- No requirement of re-aligning after dismantling of coupling

TECHNICAL DATA

Size	DBSE	Bush Size	ØA	ØD	B		E	J	S		Ød	Tyre Size UT/UTT	Bush Size	F	
					UT	UTT			UT	UTT				UT	UTT
12	80	1210	118	83	130	-	25	22	57	-	25	UT 0040	1008	21	-
	100	1210	118	83	150	-	25	22	77	-	25	UT 0040	1008	21	-
16	100	1615	127	80	163	-	38	24	94	-	32	UT 0040	1008	21	-
	140	1615	127	80	203	-	38	24	134	-	32	UT 0040	1008	21	-
	100	1615	127	80	166	-	38	24	94	-	32	UT 0050	1210	25	-
	140	1615	127	80	206	-	38	24	134	-	32	UT 0050	1210	25	-
	100	1615	127	80	166	-	38	24	94	-	32	UT 0060	1610	30	-
	140	1615	127	80	206	-	38	24	134	-	32	UT 0060	1610	30	-
25	100	2517	178	127	-	180	45	27	-	94	48	UTT 0070F	2012	-	16
	140	2517	178	127	-	220	45	27	-	134	48	UTT 0070F	2012	-	16
	180	2517	178	127	-	260	45	27	-	174	48	UTT 0070F	2012	-	16
	100	2517	178	127	-	193	45	27	-	94	48	UTT 0080F	2517	-	21
	140	2517	178	127	-	233	45	27	-	134	48	UTT 0080F	2517	-	21
	180	2517	178	127	-	273	45	27	-	174	48	UTT 0080F	2517	-	21
	140	2517	178	127	-	233	45	27	-	134	48	UTT 0090	2517	-	24
	180	2517	178	127	-	273	45	27	-	174	48	UTT 0090	2517	-	24
30	140	3030	216	146	-	270	76	33	-	134	60	UTT 0100F	3020	-	20
	180	3030	216	146	-	310	76	33	-	174	60	UTT 0100F	3020	-	20
	140	3030	216	146	-	270	76	33	-	134	60	UTT 0110	3020	-	21
	180	3030	216	146	-	310	76	33	-	174	60	UTT 0110	3020	-	21
35	140	3535	248	178	-	297	89	33	-	134	80	UTT 0120F	3525	-	25
	180	3535	248	178	-	337	89	33	-	174	80	UTT 0120F	3525	-	25
	140	3535	248	178	-	297	89	33	-	134	80	UTT 0140	3525	-	22
	180	3535	248	178	-	337	89	33	-	174	80	UTT 0140	3525	-	22